

# Beacon LED Status Indicator Signals

Your ezRoom or Juno Connect is equipped with a status indicator Beacon or LCD which helps you know the status of your device. The color of the Beacon or LCD will change based on what is happening with your system. It is also possible for your system to be configured to turn the Beacon off.

Color	LCD	Beacon	Status	Notes
No light			Power off/asleep	
White			Power on	
Flashing White			System on backup power Unit on backup PoE	Back-up power is an option and must be installed separately
Green			Voice command ready	
Blue			Intercom call active	When used with FrontRow Conductor
Purple			Page/Bell/Pre-recorded message active	When used with FrontRow Conductor
Red			Recording active	When used with FrontRow Teacher Edition
Flashing Red			Recording paused	When used with FrontRow Teacher Edition
Alternating Yellow/White			System re-boot required	Contact your system administrator